



# **Instructions for use**

# NAVAHO°SIT/NAVAHO°SIT FAST

(EN) Seat harness, work positioning belt.

# (I)P

(EN) - NAVAHO SIT or NAVAHO SIT FAST assembled with a TOP chest harness arrest harness, work positioning belt, seat harness.

(EN) - NAVAHO SIT or NAVAHO SIT FAST assembled with a TOP CROLL chest harness Fall arrest harness, work positioning belt, seat harness, rope access harness with integrated CROLL.

# WARNING

Activities involving the use of this equipment are inherently dangerous. You are responsible for your own actions and decisions.

- Before using this equipment, you must:
   Read and understand all Instructions for Use.
- Get specific training in its proper use.
  Become acquainted with its capabilities and limitations.
- Understand and accept the risks involved.



FAILURE TO HEED ANY OF THESE WARNINGS MAY RESULT IN SEVERE INJURY OR DEATH.

3 year guarantee Patented

# **C** € 0082

# Attachment point minimum breaking strength


NAVAHO SIT/ NAVAHO SIT FAST






Α


Size **0**  $x_{S\to S}$   $60 \le A \le 100 \text{ cm}$   $45 \le B \le 57 \text{ cm}$ 

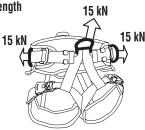

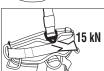

S

1190 g

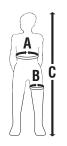


Size I	S→L	/U≤A≤12U CM	50 ≥ B ≥ 65 CM	-	1190 g
Size 2	L→XXL	80≤A≤140 cm	60≤B≤75 cm	-	1300 g
TOP					
Size 1	S→L	-	-	160≤C≤180 cm	585 g
Size 2	L→XXL	-	-	175≤C≤200cm	635 g
TOP CROLL					
Size 1	S→L	-	-	160≤C≤180 cm	645 g
Size 2	L→XXL	-	-	175≤C≤200cm	695 g

B


PFT7I ZI Cidex 105A 38920 Crolles

www.petzl.com/contact

ISO 9001 Copyright Petzl

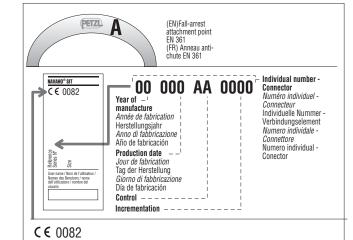

APAVE SUDEUROPE SAS BP3 - 33370 ARTIGUES PRES - BORDEAUX - France

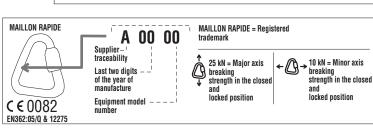

Body controlling the manufacturing of this PPE Organisme contrôlant la fabrication de cet EPI

Organisation, die die Herstellung dieser PSA kontrolliert Organismo che controlla la fabbricazione di questo DPI Organismo controlador de la fabricación de este EPI



# **C €** 0082

Body controlling the manufacturing of this PPE Organisme contrôlant la fabrication de cet EPI Organisation, die die Herstelllung dieser PSA kontrolliert Organismo che controlla la fabbricazione di questo DPI Organismo controlador de la fabricación de este EPI


Notified body intervening for the CE type examination Organisme notifié intervenant pour l'examen CE de type Zertifizierungsorganisation für die CE-Typenüberprüfung Enter riconosciuto che interviene per l'esame CE del tipo Organismo notificado que interviene en el examen CE de tipo


Notified body intervening for the CE type examination Organisme notifié intervenant pour l'examen CE de type


Zertifizierungsorganisation für die CE-Typenüberprüfung Ente riconosciuto che interviene per l'esame CE del tipo Organismo notificado que interviene en el examen CE de tipo

APAVE SUDEUROPE SAS BP3 - 33370 ARTIGUES PRES - BORDEAUX - France

# Nomenclature of parts

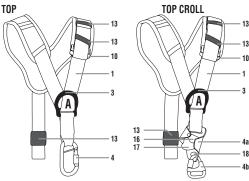

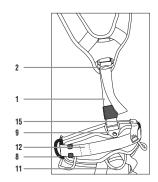

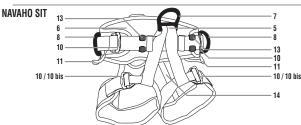



# (EN) Nomenclature of parts

- -TOP chest harness: (1) Shoulder straps, (2) Dorsal adjustment buckle, (3) EN 361 sternal attachment point.
- (4) Directional connector.
   TOP CROLL chest harness:

- TOP CHULL chest namess:
  (1) Shoulder straps,
  (2) Dorsal adjustment buckle, (3) EN 361 sternal attachment point,
  (4) EN 12841 integrated CROLL ventral rope clamp,
  (4b) Directional maillon rapide with separation bar,

- (17) Trigger/safety catch, (18) Connection hole.

   NAVAHO SIT and NAVAHO SIT FAST seat harnesses: (5) Ventral point (textile) connecting the chest harness to the seat harness,

- to the seat marness,
  (6) Belt,
  (7) EN 358, EN 813, ventral attachment point,
  (8) EN 358 lateral belt attachment points,
  (9) Rear buckle joining chest and seat components
  with EN 358 restraint attachment point,
  (10) Double-Beak distactment buckle
- (10) DoubleBack adjustment buckles, (10b) FAST quick-attach buckles,
- (11) Equipment loop.

- - (12) Slot for tool carrier, (13) Strap retainer, (14) Adjustable elastic straps, (15) Label with markings that stows in the waist belt support.

Principal materials Principal materials
Harness: polyester, steel (adjustment buckles),
aluminum alloy (attachment points).
CROLL ventral rope clamp: aluminum alloy (body),
chrome-plated steel (cam), polyamide (safety catch). Only the techniques shown in the diagrams that are not crossed out and/ or do not display a skull and crossbones symbol are authorized. Check our Web site www.petzl.com regularly to find the latest versions of these documents. Contact PETZL if you have any doubt or difficulty understanding these documents.

# Field of

- application

   NAVAHO SIT and NAVAHO SIT FAST
  Seat harness, work positioning belt.
   NAVAHO SIT or NAVAHO SIT FAST
  assembled with a TOP chest harness
  Fall arrest harness, work positioning
  helt seat harness
- belt, seat harness.
   NAVAHO SIT or NAVAHO SIT FAST assembled with a TOP CROLL chest

assembled with a TOP CRULL chest harness. Fall arrest harness, work positioning belt, seat harness, rope access harness with integrated CROLL. This product must not be loaded beyond its others that belt access to the control of the

its strength rating, nor be used for any purpose other than that for which it is designed.

### WARNING

# WARNING Activities involving the use of this equipment are inherently dangerous. You are responsible for your own actions and decisions. Before using this equipment, you must: - Read and understand all instructions

- Get specific training in its proper use.
   Become acquainted with its capabilities and limitations.
- Understand and accept the risks

Failure to heed any of these warnings may result in severe injury or death.

### Responsibility

WARNING, specific training is essential before use.
This product must only be used by

competent and responsible persons, or those placed under the direct and visual control of a competent and responsible

control of a competent and responsible person. Gaining an adequate apprenticeship in appropriate techniques and methods of protection is your own responsibility. You personally assume all risks and responsibilities for all damage, injury strates the whole processor when you can be appropriated to the processor with the processor within a contract of the processor or death which may occur during or following incorrect use of our products in any manner whatsoever. If you are no able, or not in a position to assume this responsibility or to take this risk, do not

# Inspection, points to verify

Inspection, points to verify
Before each use
- Harness
Check the webbing at the attachment
points, at the adjustment buckles and at
the safely stitching.
Look for cuts in the webbing, wear
and damage due to use, to heat, and
to contact with chemical products,
etc. Be particularly careful to check for
cut threads.
Verify that the DoubleBack and FAST
buckles operate properly.
- TOP
Directional connector
Make sure the body, gate, gate hinge and

Directional connector
Make sure the body, gate, gate hinge and
locking sleeve are free of any cracks,
deformation, corrosion, etc. Open
the gate and verify that it closes itself
automatically when released. Verify that
he locking sleeve operates properly. The
Keylock slot (gate) must not be blocked
by any foreign matter (dirt, pebble, etc.).
- TOP CROLL

Tigetional maillon rapids.

by any roreign matter (ortr, pebble, etc.) - TOP CROLL
Directional maillon rapide
Before each use, check the body,
Verify that the locking nut is screwed
on completely (no threads visible) and
tightened with a torque of 3 Nm.
CROLL ventral rope clamp
Before each use, check the condition of
the body, the attachment hole, the cam
and the safely catch (cracks, scoring,
deformation, wear, corrosion), the cam
springs and axle. Make sure the teeth
are not worn out. Attention, do not
use a rope clamp that has missing or
worn-out teeth. worn-out teeth.

worn-out teem. During each use It is important to regularly inspect the condition of the product. Check its connections with the other equipment in the system and make sure that the various pieces of equipment in the

various pieces or equipment in rule system are correctly positioned with respect to each other.

Consult the details of the inspection procedure to be carried out for each item of PPE on the Web at www.petzl.com/ ppe or on the PETZL PPE CD-ROM.

Contact PETZL if there is any doubt about the condition of this product about the condition of this product.

# Diagram 1. How to put the harness on

18. Adjust the belt by pulling on the belt straps. Stow the excess webbing neatly using the strap retainers (flat against the waist belt).

1A. Hold the seat harness by the belt, put your legs through the belt and pull it up to your waist.

₹.





DoubleBack

3:5

Fast

**₽** 

1C Faster and adjust the leg loops. HWA/HO SIT DoubleBack blookels. HWA/HO SIT FAST Easter the FAST buckles. Be careful of foreign bodies which can impade the operation of the FAST buckles (such as pebbles, sand, clothing.). Check for correct locking.

- Short ends: use the retainers in front of the adjustment buckles. 

 $\oplus$ 

<u>.</u>

**G-**

DoubleBack

- Long ends: pass them through the lateral rings then through the retainers behind the rings.

L→ Go to size 2

Fast

Adjustment and adjustment and vour harness work harness must be adjusted to fit snugly to remain the first property of a fall. The first property of a fall in the harness (suspension and the property of a fall in the harness (suspension and the fall in the harness (suspension and the fall in the harness from each attachment to welfy that the property, provides adduate comfort for the intended use and that it is optimally adjusted.

TSAT TIS OHAVAN bns TIS OHAVAN

# **WORK POSITIONING and RESTRAINT**

# Diagram 2. EN 358: 2000 harness for work positioning and restraint These attachment points are designed to either hold the user in position at the work-post (work in suspension: work positioning), or to prevent the worker from entering a zone where a fall is possible (leash principle: travel restraint). These attachment points must only be used to attach to a restraint or work positioning system, maximum fall height 0.5 m. These attachment points are not designed for fall arrest use and it may be necessary to supplement work positioning or restraint systems with collective fall arrest systems (e.g. safety nets) or personal fall arrest systems (e.g. an EN 363 fall arrest system). When used in a fall arrest system in accordance with the EN 363 standard, use a TOP or TOP CROLL chest harness in conjunction with your seat harness.

2A. Ventral attachment point
2B. Lateral belt attachment points
Always use the two lateral rings together by clipping a positioning
lanyard between them.
There should be a supporting surface for the feet for comfortable
work positioning.
Adjust the work positioning lanyard so that the anchor point is
above or at the same level as the user's waist. The lanyard is kent


above or at the same level as the user's waist. The lanyard is kept under tension and the free fall distance is limited to 0.5 m.







2C. Rear restraint attachment point
This rear attachment point on the belt is intended
only to attach a restraint system that keeps you
from entering a zone where the risk of a fall exists
(leash principle).
Regularly verify the length of your restraint and/or
work positioning lanyard during use.

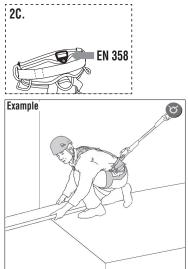

# **Restraint only - No suspension**



# **ROPE ACCESS**

# Diagram 3. Seat harness: EN 813: 1997

Ventral attachment point
The EN 813: 1997 standard concerns seat harnesses that are used in work positioning, restraint, and rope access systems when a low attachment point is necessary. Use this ventral ring to attach a descender, positioning lanyards or progression

lanyards.
This attachment point should not be used to attach fall arrest systems.



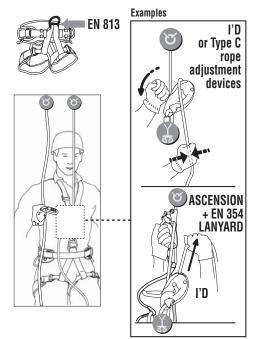


Diagram 4. Preparation
To attach the chest harness to the seat harness, base dorsal strap
through the rear chest-seat joining buckle (9), then through the elastic
retainer. Then thread the strap through the adjustment buckle for the dorsal
adjustment (2), then again through the elastic retainer.





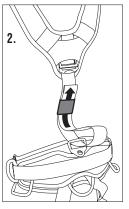

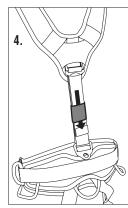


# Diagram 5. How to put the harness on

5A. Putting the shoulder straps off to one side, hold the seat harness by the belt, put your legs through the belt and pull it up to your waist.


5A.

5B. Adjust the belt by pulling on the belt straps. Stow the excess webbing neatly using the strap retainers (flat against the waist belt).

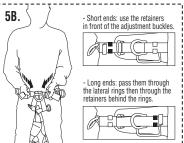



5C. Fasten and adjust the leg loops

- NAVAHO SIT: DoubleBack buckles. - NAVAHO SIT FAST: Fasten the FAST buckles. Be careful of foreign bodies which can impede the operation of the FAST buckles (such as pebbles, sand, clothing...). Check for correct locking.

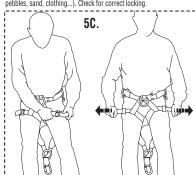

5D. Position the shoulder straps on the shoulders. Put the connector in the ventral point (textile) connecting the chest harness to the seat harness (5). Lock the connector by turning the locking sleeve.

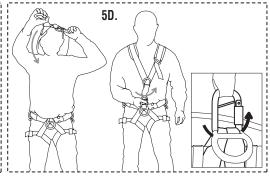

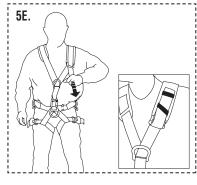


5F. Initial dorsal adjustment This adjustment should be done nins adjustment should be done only once when putting on your harness for the first time. Have another person help you do it. Slide the strap retainer so that both layers of webbing are taut between the two buckles, (2) and (3) and (3) and (4) and (4). (2) and (9) (no slack). Be sure to neatly stow the excess

Be sure to neathy stow the excess webbing (flat - no loops of slack) in the strap retainer so that it doesn't interfere with your work. Adjust the position to suit your individual body shape and size, position the DoubleBack buckle at the level of the shoulder blades.

suspension test suspension test
Your harness must be
adjusted to fit snugly to
reduce the risk of injury in
case of a fall.
You must move around
and hang in the harness
(suspension test) from
each attachment point
with your equipment to

with your equipment to verify that the harness fits properly, provides adequate comfort for the intended use and that it is portingly adjusted. optimally adjusted.

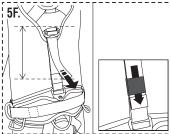

G

# Diagram 6. Manual locking oval directional

connector

This EN 362: 2004 connector, a component of the harness, is a Patented connecting element for & 75 g to the seat harness to the seat harness. Do not use it to attach a lanyard or energy absorber.
6A. ATTENTION DANGER, the connector must always. the connector must always be used with the gate closed and locked. The closed and locked. Ine strength of the connector is greatly reduced if the gate is open. Systematically verify the gate is closed by pressing it with your hand.

8. The connector (closed)

tested

6B. The connector (closed)

is strongest when loaded on its major axis. Any other position reduces its strength.


24 kN 7 kN









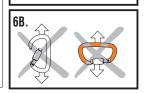

# **FALL ARREST**

# Diagram 7. EN 361: 2002 fall arrest harness


Full body harness for fall arrest, component of a fall arrest system in accordance with the EN 363 In accordance with the EN 305 standard (personal fall arrest systems). It must be used in conjunction with EN 795 anchors, EN 362 locking carabiners, EN 365 energy absorber, etc.


74. Sternal attachment point

7.A. Sternal attachment point
Use only this point to attach
a fall arrest system (for
example a mobile fall arrester,
an energy absorber, or other
system described in the
EN 363 standard). For ease of
identification, this point is marked
with the letter 'A'

with the letter 'A'.
Clearance: amount of free space

Clearance: amount of rice space below the user. The clearance below the user must be sufficient to prevent the user from striking any obstacle in case of a fall. Specific details on calculating clearance are found in the technical notices for the other. components (energy absorbers, mobile fall arrester, etc.).

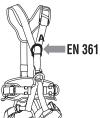

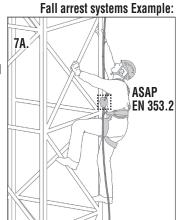


VAVAHO SIT or NAVAHO SIT FAST + TOP CROLL

Diagram 8. Preparation

To attach the chest harness to the seat harness, pass the dorsal strap through the rear chestseat joining buckle (9), then through the elastic retainer. Then thread the strap through the
adjustment buckle for the dorsal adjustment (2), then again through the elastic retainer.


To attach the CROLL to the front of the harness, attach it to the maillon rapide located in
the textile sentral connection point (5). Strow the maillon closed and inhighten the nut with a the textile ventral connection point (5). Screw the maillon closed and tighten the nut with a wrench to 3 Nm of torque. Be sure to close and clip the plastic separation bar.

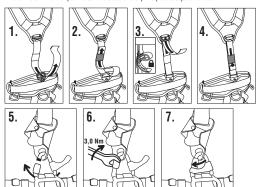

# Diagram 9. Directional

maillon rapide The maillon rapide is a component of the harness that is used as a connecting element to join the front of the torso to the belt. It works the possible to the torso to the belt. It was the blue to be the torso to the belt. It was the blue to be the torso to the belt. It was the blue to be the torso to the belt. It was the blue to be the torso to the belt. It was the blue to be the torso to the belt. It was the blue to be the torso to the belt. It was the blue to be the torso to the belt. It was the blue to be t must always be tightened to 3 Nm (making unscrewing by hand impossible).

Do not use it to attach a lanyard or energy absorber.

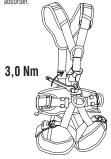

# Diagram 10. How to put the harness on open the leg loops.

10A. Spread the shoulder straps apart, grasp the hamess by the belt and slip both feet through the leg loops.

10B. Position the shoulder straps on the shoulders.

10C. Adjust the belt by pulling on the belt straps. Stow the excess webbing neatly using the strap retainers (flat against the waist belt).

10D. Fasten the FAST buckles and adjust the leg loops. Be careful of foreign bodies which can impede the operation of the FAST buckles (such as pebbles, sand, clothing...). Check for correct locking.

<del>1</del>6

Short ends: use the retainers in front of the adjustment buckles.

100.


. 108


10A.


Your harness must be adjusted to fit smught to reduce the risk of injury in case of a fall. You must move atround and harng in the harness (suspension rest) from each attachment point with your equipment to verify that the harness fits properly, provides adequate comfort for the intended use and that it is optimally adjusted. Adjustment and suspension test This addistrement storled be done only once when putting on your harness for the first time. Have another person help you do fit. Silide the strap retainer so that both layers of webling are faut between the two buckles, (2) and (9) (no sleek). Be suite to nearly stow the coxess. done only 10F. Initial dorsal adjustment This adjustment should be don

webbing (flat - no loops of slack) in the strap retainer so that it doesn't interfere

Adjust the position to suit your individual body shape and size, position the DoubleBack buckle at the level of the shoulder blades with your work

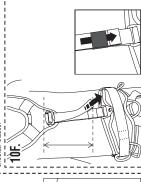

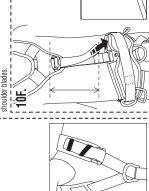

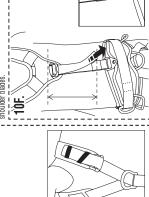

# # H

10E. Adjust the shoulder straps. Stow the excess webbing using the strap retainer on the shoulder strap.

1315

Long ends: pass them through the lateral rings then through the retainers behind the rings.

Diagram 13. Principles of

capable of damaging it (e.g. sharp edge, rough surface, etc).

- The rope must be able to slide freely through the CROIL. Beware of structions that can impede sliding (e.g. knot or worn/damaged section in the rope, etc.).

- Do not rongs to the a stopper knot in Deagfarfulf 4c/Rope et limbing

of the cam (pebbles, mud, vegetation, coordage, slings, clothing, plant, etc.).

ERWARE of catching the safet etc.).

Acthin in oldring and webbing, acthin in oldring and webbing.

The rope between the CROL L and the anchor point must always be faut. The rope between the CROL L and the anchor point of the rope.

Shock-load absorption by the rope:

Chock-load and the sent of a fall.

The oper rope diminishes appeared by the rope diminishes.

138. Moving the CROLL down the rope (CROLL down the rope (CROLL down the rope and simultaneously push down on the came with the rindex ringer to diseasing the teeth from the sheath of the rope con con amanipulate the trigoer/sety act of the ringer state. a risk of involuntary opening of the cam.

136. Operational check


Before actin less, worlfy correct

O orientation on the rope and
of functioning of the devices a less must
always be carried out with the user
self-belayed.
Push the GROLL up the rope. It must
sile easily up the rope. Pull it down
to refrivit grips the rope.
130. Percentions
to entiry it grips the rope.


- Close the GROLL's cam when not
in in sep because appliment or other
objects can become studie in the
device if left open.

- ATTENTON do not allow foreign
objects to interfere with the operation


- Work rope. Use the CROLL and another hard rope clamp (e.g., ASCENSION handled rope clamp) with a foot-loop. Always attach yourself to the second ascender with an appropriate laryard. - Safety rope: use a type A device.

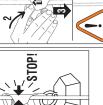

Working line | Example :

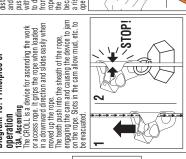

Safety line

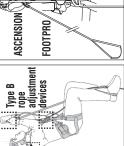

adjustment devices Type A rope

Use a 10-13 mm EN 1891 type A semi-static kernmantel rope.

ASAP EN 353.2

**₽** 

absorber, or other system described in the EN 363 standard). For ease of identification, this point is marked with the letter 'A'.

# **ROPE ACCESS**

**FALL ARREST** 

**CROLL ventral rope clamp EN 12841: 2006** Diagram 12. Installation on the rope work rope.
ATTENTION, it must be used
with a type A backup device
on a second (safety) rope
(e.g. ASAP mobile fall arrester The EN 12841: 2006 CROLL rope clamp is a type B rope adjuster used to ascend the

Field of application

EN 361: 2002 fall

Diagram 11

arrest harness

component of a fall arrest system in accordance with the EN 363 Full body harness for fall arrest, standard (personal fall arrest

Pull the trigger/safety catch down and out with the thunks and nieth Kinger, Until 10 fors in place against the body of the device. The cam is thus held open. Put the rope into position. Push on the safety catch until the cam swings into place against the rope. The safety catch helps prevent involuntary opening of the cam.

**♦ EN 361** 

for rope). The CROLL ventral rope clamp is not suitable for use in an EN 363 fall arrest system.

**EN 12841** Type B


Fall arrest systems Example:

Rope diameter



Clearance: amount of free space below the user. The clearance below the user. The clearance below the user thank be suffered to prevent the user from striking any obstacle in calculating clearance are found in the technical notices for the other momonems (remay absorbers, mobile fall arrester, etc.).

# Equipment loop maximum load

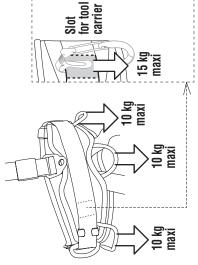



# Legends

(EN) Carefully read this notice (FR) Lire attentivement cette

notícia (NL) Lees aandachtig deze bijsluiter (SE) Lās denna information

(RU) hys (CZ) Zafüteni (CZ) Zafüteni (SI) Obcanemiev (HU) Tömeg (BG) Harosapsane ((RP) 奇重 (KR) 하章

страховки (CZ) Ukotvení (PL) Punkt

การรับน้ำหนัก

stanowiskowy (SI) Sidrišče (HU) Fix pont (BG) Saxpemane (KR) 单丘점 (CN) 确定点 (TH) #10

(ES) Carga (PT) Carga (NL) Last (SE) Belastning (FI) Taakka (NO) Belastning

(EN) Anchor FIR Amarage (DE) Anschlagpunkt (17 Ancoraggio (ES) Anclaje (ES) Anclaje (NI) Veramkering (SE) Förankring (NO) Anchoragio (NO) Anchoragio

navodilo (HU) Kérjük olvassa el figyelmesen a tájékoztatót! (BG) Прочетете внимателно rasu mrcrpykum (JP) 本説明書を良くお読 みください (KR) 기술 설명서 숙지 อ่านข้อแนะนำนี้อย่างละเอียด 圖수 (CN) 仔细阅读本声明 niniejsza instrukcję (SI) Pozorno preberite to

внимательно эту инструкцию (CZ) Čtěte pozorně tento návod (PL) Przeczytać uważnie (RU) Прочитайте NO) Les bruksanvisningen nøye notice (DE) Lesen Sie diese Gebrauchsanweisung sorgfältig Lea atentamente esta ficha durch (IT) Leggere attentamente queste istruzioni (ES) Lea atentamente esta fic ecnica (PT) Leia atentamente esta noggrant (FI) Lue tāmā kāyttöohje huolellisesti

Inspect the connectors as indicated in their Instructions for use. Various - ATTENTION DANGER, do not allow this product to rub

against abrasive materials or sharp edges.

- Users must be medically fit for activities at height.
WARNIWIG, inert suspension in a harness can result in serious rijury or death.

- You must check to ensure that the product markings remail legible during the entire lifetime of the product. - You must verify the suitability of this equipment for use in your application with regard to applicable governmental regulations and other standards on

# There are many reasons why a product may be judged obsoled and thus retired before the end of its actual lifetime. Examples include: changes in applicable standards, regulations, or legislation; development of new techniques, incompatibility with other equipment, Product obsolescence

Any modification, addition to, or repair of the equipment other than that authorized by Petzl is prohibited: due to the risk of reducing the effectiveness of the equipment. Modifications, repairs

Storage, transport

# Keep your harness in a container (bag, box) to protect it from exposure to UV, moisture, chemical products, etc.

Guarantee

This product is guaranteed for 3 years against any fauls in makerials or manufacture. Exclusions from the guarantee normal wear and tear, coxidation, modifications or alterations, incorrect storage, poor miniterance, damage due to accidents, to negligience, or to improper for incorrect usage.

PELS, is not responsible for the consequences, direct, indirect or accidental, or any other type of armage befalling or resulting from the use of its products.

# Compatibility: attachment points, connectors

An incompatible connection can cause accidental disconnection, breakage, or affect the safety function of another piece of equipment. WARNING, the attachment points of your harness can

components of your equipment, see the instructions specific but his products. WARNIMG, when using multiple pieces of equipment together, a dangerous situation can result if the safety function of one piece of equipment is compromised by the operation of another piece of equipment. Contact Petzl if you are uncertain about the compatibility

Compatibility Check that this product is compatible with the other

EN 365: WARNING

act as a lever on the gate of a connection.

When a sudden tension comes and on the tope and/or an external pressure on the locking system, and the comestor is pondy positioned. The locking sleeve can break and the gate can open itself.

To reduce this risk, check that your connections are properly positioned each time the system is loaded (anyar, descender etc.).

Also make sure your connectors are compatible with the attachment points (Stape, size, etc.) by avoiding the asset of connectors showing a tendency to position themselves incorrectly (and stably) in the attachment

of your equipment.

The anchors, work at height
The anchor point of the system should preferably be
located above the user's position and must conform to
the requirements of the EM 295 standard, in particular
the requirements repeating of the anchor must be 10 kM.

Rescue plan

espected. The instructions for use must be provided to users of

occupational safety.
- The instructions for use for each item of equipment used in conjunction with this product must be

You must have a rescue plan and the means to rapidly implement it in case of difficulties encountered while using this equipment. This implies an adequate training in the meessary rescue techniques.

Comectors
Carabiners must always be used with the gate closed
and locked. Systematically verify the gate is closed by
pressing if with your faind.

this equipment. If the equipment is re-sold outside the original country of destination the reseller shall provide these instructions in the language of the country in which the product is to be used. Lifetime

WARNING, an exceptional event can reduce the lifetime of the product to one single use; for example, if it is exposed to any of the following: chemicals, extreme

details: type of equipment, model, name and contact information of the manufacture of distribution, neans of identification (serial or individual number), year of manufacture, date for purbase, date of tiest use, name of user, all other pertinent information for example maintenance and frequency of use, the history of periodic inspections (date) comments and noted problems? Tame and signature of the competent person who periodic manufacture of the competent person who periodic manufacture of the competent person rispection). See example of detailed inspection record and other inspection. Immediately retire any equipment if:

- if falls to pass inspection (inspection),
use and the periodic in-depth inspection),

- it has been subjected to a major fall or load, you do not know its full usage history, it is at least 10 years old and made of plastics or textiles, - you have any doubt as to its integrity. Destroy retired equipment to prevent further use. When to retire your equipment petzl.com/ppe the properatures, sharp edges, major fall or load, etc.
The gottenfall interner of Part productis as follows; up
to 10 years from the date of manufacture for plastic and
exitle products. It is indefinite for metallic products.
The actual lifetime of a groud ends when if meats one
of the retirement criteria itsed below, (see "WIYhen to
retire your equipment"), or when in its system use it is
judged obsolete. is influenced by a variety of factors.
The actual lifetime is influenced by a variety of factors. The actual lifetime is influenced by a variety of factors such as: the influency, and environment of use, the competence of the user, he competence of the user, how well the product is stored and maintained, etc. Inspect equipment periodically for damage and/or deterioration.

In addition to the inspection before and during use, a periodic in-depth inspection must be carried out by a competent inspection at least once every 12 months. This inspection must be performed at least once every 12 months. The trapeutory of the incephi inspection must be performed by the power must be governed by the type and the intensity of use. To keep better track of your equipment, it is preferable. to assign each piece of equipment to a unique user so that he will know its listory. The results of inspections should be documented in an «inspection record». This document must allow recording of the following.

(JP) メンテナ バス (KR) (CN) 無券 (TH)

Maintenance

การช่อมแชม (RU) Техническое обслуживание (CZ) Údržba



(RU) Onacasa nponyxuus
(Z) Nebespečne vytolsky
(PL) Produkty niebespieczne
(SI) Nevarne kemikalie
(HU) Voszelyes termekek
(BG) Onacan nponyxru
(IP) †§\$\frac{1}{2}\$\$\frac{1}{2

(CN) 危险产品 (TH) วัตถุอันตราย

(PL) Konserwacja (SI) Vzdrževanje (HU) Karbantartás (BG) Поддържане

# 

30 C maxi

(CZ) Čištění Desinfekce

(EN) Drying Fig. Sections (DE) Trocknen (DE) Trocknen (ES) Secado (FT) Secado (CN) 清洗 消毒 (TH) ท่าความสะยาดโดย โชสารนาเชื้อ (PL) Czyszczenie Dezynfekcja (SI) Čiščenje/razkuževanje (HU) Tisztitás (BG) Почистване дээлнфекция (JP) 手入れ方法 消毒 (KR)

(EN) Cleaning Disinfection (FR) Nativoge Desimerion (DE) Renigung Desimerion (DE) Planingung Desimerion (TI) Pulizia Disinfección (FI) Limpeza Desimeriogáo (NI) Reniging Ontsmetting (SE) Rengóring Desimiresting (SE) Rengóring (SE) Rengóring

การขนส่งและการเก็บรักษา

transporte (NL) Opbergen en vervoeren (FI) Säilytys ja kuljetus (NO) Lagring og transport (RU) Хранение и

Tewneparypa (JP) 気温 (CN) 温度 (TH) gawn和

(FR) Température (FR) Température (T) Temperatura (ES) Temperatura (ES) Temperatura (NT) Temperatura (NT) Temperatura (NN) Temperatura (FT) Lampótila (NO) Temperatura (T) Lampótila (NO) Temperatura (T) Temp

transporte (PT) Armazenamento e

Chypaterie (JP) 持ち運びと保 曾方法 (KR) 보迚과 운송 (CN) 运输及储存 (TH)

(ВG) Транспорт и

(EN) Storage and transport (FR) Rangement et transport (DE) Lagerung und Transport (IT) Sistemazione e trasporto (ES) Almacenamiento y

(PL) Temperatura (SI) Temperatura

(EN) Temperature

+ + 80°C + 176°F

(HÜ) Hőmérséklet

(RU) Чистка Дезинфекция

транспортировка (CZ) Składování a doprava (PL) Pakowanie i transport (SI) Shranjevanje in transport (HU) Tárolás, szállítás

(HU) Szárítás (BG) Cymene (JP) 乾之燥 (CN) 使干燥 (TH) ทำใหนหง

() Entretien E) Wartung () Manutenzione (PT) Manutenção (NL) Onderhoud (SE) Underhåll (FI) Huolehtiminen (FI) Huolehtiminen (NO) Vedlikehold (ES) Mantenimiento

(RN) Dangerous products
(RR) Potalitical Education Services
(TR) Producting Language
(TR) Producting periodics
(ES) Productos periodosis
(ES) Productos periodos period

# (JP) 日本語

## 使用方法

- 『ナバホ シット』『ナバホ シット ファスト』

『ナバホシット』または『ナバホシットファスト』にチェストハー ネス『トップ』を組み合わせた場合 フォールアレストハーネス、ワークボジショニングベルト、シットハー

へへ - プナバホ シット』または『ナバホ シット ファスト』にチェストハー ネス『トップ クロール』を組み合わせた場合 フォールアレストハーネス、ワークポジショニングベルト、シットハーネ

ス、『クロール』が付いたロープアクセスハーネス.

図に示された使用方法の中で、×印やドクロマークが付いていないも のだけが認められています。最新の取扱説明書はウェブサイト(www. alteria.co.jp)で参照できますので、定期的に確認してください。 疑問点や不明な点は幽アルテリア(TEL04-2969-1717)にご相談く

## 用途について

『ナバホ シット』または『ナバホ シット ファスト』にチェストハー **ネス『トップ クロール』を組み合わせた場合** フォールアレストハーネス、ワークボジショニングベルト、シットハーネ ス、『クロール』が付いたロープアクセスハーネス、

# 警告

この製品を使用する高所での活動には危険が伴います。 ユーザー各自が自身の行為、判断についてその責任を負うこ ユーサー合品 ルー・とします。 ととします。 使用する前に必ず: ・取扱説明書をよく読み、理解してください。 この製品を正しく使用するための適切な指導を受けてください。 この製品の機能とその限界について理解してください。 高所での活動に伴う危険について理解してください。 高所での活動に伴う危険について理解してください。 高所での活動に伴う危険について理解してください。

- これらの注意事項を無視または軽視すると、重度の障害や死に

戻任 警告:使用前に適切なトレーニングが必要です。 この製品は使用方法を熟知していて責任能力のある人、あるいはそれらの人から目の届く範囲で直接指導を受けられる人のみ使用して下さい。 ユーザーは各自の責任で適切な技術及び確保技術を習得する必要

ユーザーは合日の貝比で週別なJX門及り呼降はX門と口い、・・・ があります。 ペツル製品の誤った方法での使用中及び使用後に生ずるいかなる損 害、傷害、死亡に関してもユーザー各自がそのリスクと責任を負うことと します。各首で責任がとれない場合や、その立場にない場合はこの製 品を使用しないで下さい。

# 各部の名称

**甘口的シーロが**- チェストハーネス『トップ』:
(1) ショルダーストラップ (2) 背部調節バックル (3) EN 361 胸部アタッチメントポイント (4) 反転防止機能付いネクター.
- チェストハーネス『トップ クロール』:
(1) ショルダーストラップ (2) 背部調節バックル (3) EN 361 胸部アタッチメントポイント (4) EN 12841 ローブクランププクロール』(4b) 反転防止機能付コネクター(16) 力ム (17) セーフティキャッチ、(28) 下部ホール。

(18) 下部ホール.
- シットハーネス『ナバホ シット』『ナバホ シット ファスト』:
(5) チェストハーネスを連結するためのウェピングアタッチメントポイント(6) ベルト(7) EN 358 EN 813 腹部アタッチメントポイント(8) シEN 358 側部アタッチメントポイント(9) チェストハーネスを連結するためのパックル / EN 358 レストレイン用アタッチメントポイント(10) ダブルバックがックル (10) ファストバックル (11) ギアループ(12) キャリツール取付用スロット(13) ストラップウティナー (14) 調節型エラスティックストラップ(15) マーキングラベル.

エータポリ ハーネス: ポリエステル、スチール(調節バックル)、アルミニウム合金( アタッチメントポイント) ロープクランプ『クロール』:アルミニウム合金 (本体)、クロムメッキスチ ール (カム)、ポリアミド (セーフティキャッチ)

# 点検のポイント

# 毎回、使用前に-ハーネス

- ハーネス
ウェビングのアタッチメントポイント部分、調節バックル部分、および縫製部分を点検して下さい。
ウェビングに切れ目がないこと、使用による。または熱や化学製品との
技触による庭籍やも損勢がないことを確認してください。特に縫製部分に
ほつれがないか注意して点検してください。
「キャンブ」
反転防止機能付コネクター
フレーム、ゲート、ヒンジ、およびロッキングスリーブに亀裂や変形、腐食等がないことを確認してください。「中・ブ」
ロックされることを確認してください。「ウートを開けて放すと、ゲートが開まりロックされることを確認してください。「ウートを開けて放すと、ゲートが開まりロックされることを確認してください。「ウッキングスリーブが正常に機や小石等が詰まらないようにしてください。
「キップ・フロール」
反転防止機能付コネクター

## 反転防止機能付コネクター

毎回、使用前に必ず点検してください。 スクリューゲートがしっかりと締まっていることを確認してください(ネ ジ山が見えないようにしてください)。3 Nm のトルクで締まっていること を確認してください。

を確認しください。 ロープクランプ「クロール』 毎回、使用前に、本体、アタッチメントホール、カム及びセーフティキャッチに亀裂、傷、変形、磨耗、腐食等がないことを確認し、カムのスプリングと軸の状態を点検してください。カムの歯が磨り減っていないことを確認してください。警告:カムの歯が欠けている場合は使用しないでください。

でいたとい。 使用中の注意点 製品の状態を常に確認してください。他の用具との連結部や、システム を構成する各用具が正しくセットされていることを確認してください。 各PPE(個人保護用具)の点検方法の詳細についてはペツルのウェブ サイト(www.petzl.com/ppe)もしくはPETZL PPE CD-ROMを参照くだ

もしこの器具の状態に関する疑問があれば、(株)アルテリア(TEL:04-2969-1717)にご相談ください。

# 『ナバホ シット』 『ナバホ シット ファスト』 図1. ハーネスの装着方法

くたさい。 3. ベルトストラップを引いてウエストサイズを調節します。ストラッ の端は、ねじれがないようにして、ストラップリテイナーにしまってく ...

アンストラップの余りが短い場合:調節バックルの前方のリテイナーを使用してください。
- ストラップの余りが短い場合: 調節バックルの前方のリテイナーを使用してください。
- ストラップの余りが長い場合: 側部アタッチメントポイントを通して、その後方のリテイナーにしまってください。
1C、バックルを締めてレッグループを調節してください。
- 『ナバホシット』・ダブルバックパックル
- 『ナバホシット』・ファストボックルを閉めてください。ファストバックルの機能を妨げる可能性があるため、小石、小枝、ウェピング等が挟まらないように注意してください。ファストバックルが正しくロックされていることを確認して下さい。

されていることを確認して下さい。 調節とアスト 墜落の際に怪我をする危険を低減するため、ハーネスは体にぴったりと フィットするよう調節してください。 ハーネスが正しくフィットし、使用目的に見合う快適性が得られることを 必ず確認してください。ハーネスを装着した状態で動いたり、装備を全 て装着した状態で名アッチメントポイントから吊り下がり、適切に調節 されているかテストをしてください。

# ワークポジショニングとレストレイン

# 図2. ワークポジショニング / レストレイン用ハーネス (EN 358 2000 適合)

ストンス・ス(が)・EN 305 に早しにフォールアレストンステム/をセット する必要があります。 EN 363 に準じたフォールアレストシステムで使用する場合は、シットハ ーネスにチェストハーネス「トップ」または『トップ クロール』を組み合わ せて使用してください。

# 2A. 腹部アタッチメントポイント

2A. 展部/グツナテノトホイノト

3B. 側部アタッチメントポイント

両側部のアタッチメントポイント

で連結して使用してください。

と場が必要となります。

支点がユーザーの腰の位置より高くなるようにワークポジショニングランヤー

ドで連結して使用してください。

ならがユーザーの腰の位置より高くなるようにワークポジショニングランヤードを調節してください。常にランヤードにテンションをかけた状態で使用し、0.5m を超える落下をしないようにしてください。

態で使用し、U.Sm を超える溶トをしないようにしてくたさい。 **2C. レストレイン用アタッチメントポイント** このアタッチメントポイントは、レストレインシステムを連結する目的に のみ使用できます。 レストレインやワークポジショニングで使用するランヤードは、作業中も 常に適切な長さに調節されていることを確認してください。

### 図3. シットハーネス: EN 813: 1997

# 腹部アタッチメントポイント EN 813 1997は、ワークポジシ

# 『ナバホ シット』または『ナバホ シット ファスト』 とチェストハーネス『トップ』を組み合わせて使 用する場合

# 図4.準備

テェストハーネスとシットハーネスを接続するには、まずチェストハーネスの背部ストラップをシットハーネス背部のバックル(9)に通して折り 返し、リテイナーに通します。 次にそのストラップを背部調節バックル(2)に通し、余りをリテイナーにしまってください。

# 図5. ハーネスの装着方法

ださい。 ストラップの余りが短い場合: 調節バックルの前方のリテイナーを使

ルーストラップの余りが短い場合:調節バックルの即刀のッフィーストラップの余りが短い場合:調節バックルの即刀のッフィーストラップの余りが長い場合:側部アタッチメントポイントを通して、その後方のリテイナーにしまってください。
その後方のリテイナーにしまってください。
「ナパホシット」:ダブルバックパックルを開めてください。ファストバックルの機能を妨げる可能性があるため、小石、小枝、ウェビング等が挟まらないように注意してください。ファストバックルが正しくロックされていることを確認して下さい。ファストバックルが正しくロックされていることを確認して下さい。ウェビングアタッチメントポイント(ち)にチェストラップを肩にかけて下さい。ウェビングアタッチメントポイント(ち)にチェストラップを肩にかけて下さい。ウェビングアタッチメントポイント(ち)にチェストハーネスのコネクターを取り付けてください。ロッキングスリーブを回してゲートをロックしてください。テリンプリテイナーにしまってください。

## 5F. 背部の調節

がある。 初めて使用する際に調節してください。そうすることにより以後調節する必要がなくなります。別の人に手伝ってもらうことにより、調節が容

易になります。 余分なストラップはリテイナーに収納してください。 作業の邪魔にならないようにするため、余分なストラップはしっかりと伸 はし、弛みがない状態にしてストラップリテイナーで留めてください。 体型にあわせて調節してください。タブルバックバックルが、肩甲骨の位 置と同じ高さになるように調節してください。

間の同ではなるように調明していたとい。 調節とアスト 墜落の際に怪我をする危険を低減するため、ハーネスは体にぴったりと フィットするよう調節してください。 ハーネスが正しくフィットし、使用目的に見合う快適性が得られることを 必ず確認してください。ハーネスを装着した状態で動いたり、装備を全 て装着した状態で各アタッチメントポイントから吊り下がり、適切に調節 されているかテストをしてください。

# 図6. 反転防止機能が付いたオーバル型手動口 ック式コネクター

プノ**スー**イ・/ ター この EN 362 2004 に適合したコネクターは、ハーネスの一部であり、チェストハーネスとシットハーネスを連結するために使用します。 ランヤードやエネルギーアブソー・バーを取り付けることはできません。 6名、注意、危険:カラビナは常にゲートを閉じ、ロックされた状態で使用しなければなりません。 ゲートが開いた状態では、カラビナの強度は大幅に低下にます。

しなければなりません。ケートか開いた状態では、カラビデの強度は大 解に低下します。 ゲートを指で押し、ロックされていることを確認してください。 6B. カラビナの強度は、ゲートが閉じられ、縦軸方向に正しく荷重がか かったときに最大になります。縦軸以外の方向に荷重がかかった場合 は強度が低くなります。

# フォールアレスト

# 図7. フォールアレスト ハーネス (EN 361 2002 適合)

・ 墜落を止めるためのフルボディハーネス。EN 363 が定めるフォールア レストシステムを構成する用具の 1 つです。 必ず EN 795 に適合した アンカー、EN 362 に適合したロッキングカラビナ、EN 355 に適合した エネルギーアプソーバーと併用してください。

### 7A. 胸部アタッチメントポイント

... urguv / ノ/アノ「ハー/ア フォールアレストシステム(例:モパイルフォールアレスター、エネルギーアブソーパー、その他 EN 363 で定められているシステム)に連結する場合は必ず胸部アタッチメントポイントを使用してください。区別しやすくするため、このアタッチメントポイントには「A」の文字が刻印されています。

れています。 グ**リアランス:ユーザーの下の障害物のない空間** 墜落した場合に途中で障害物にあたることを回避するため、ユーザーの 下には必ず十分なクリアランスを確保してください。必要なクリアラン スを算出する方法は、フォールアレストシステムを構成するその他の器 具(エネルギーアプソーバー、モバイルフォールアレスター等)の取扱説 明末い召開されています。 明書に記載されています。

# 『ナバホ シット』または『ナバホ シット ファスト』 とチェストハーネス『トップ クロール』を組み合 わせて使用する場合

区の、年1個 チェストハーネスとシットハーネスを接続するには、まずチェストハーネスの背部ストラップをシットハーネス背部のパックル(9)に通して折り返し、リテイナーに通します。次にそのストラップを背部調節パックル(2)に通し、余りをリテイナーにしまってください。「アウロール』を取り付けるには、ウェピングアタッチメントポイント(5)に反転防止機能付コネクターを取り付け、『クロール』の下部ホール(18)に通してください。トルクレンチを使用して、3 Nm のトルケでスクリューゲートを締めてください。反転防止のため、プラスチックのカバーを必ず閉じてください。

# 図9. 反転防止機能付コネクター

# 図10.ハーネスの装着方法

図10. ハーネスの装着方法
レッグループのファストバックルを解除します。
10A、ショルダーストラップを両側に開いてハーネスのベルトを持ち、両足を通してください。
10B、ショルダーストラップを肩にかけて下さい。
10C、ベルトストラップを肩にかけて下さい。
10C、ベルトストラップを肩にかけて下さい。
10C、ベルトストラップを肩にかけて下さい。
2トラップの端は、ねじれがないようにして、ストラップリテイナーにしまってください。
- ストラップの余りが短い場合:調節バックルの前方のリテイナーを使用してください。
- ストラップの余りが長い場合:側部アタッチメントポイントを通して、その後方のリテイナーにしまってください。
10D、ファストバックルを閉め、レッグループを調節します。ファストバックルの機能を妨げる可能性があるため、小石、小枝、ウェビング等が挟まらないように注意してください。ファストバックルが正しくロックされていることを確認して下さい。
10E、ショルダーストラップを調節してください。余分なストラップはストラップナイナーにしまってください。

トラップリテイナーにしまってください。
10F. 肯部の調節
初めて使用する際に調節してください。そうすることにより以後調節する必要がなくなります。別の人に手伝ってもらうことにより、調節が容易になります。
余分なストラップはリテイナーに収納してください。
作業の邪魔にならないようにするため、余分なストラップはしっかりと伸ばし、弛めがない状態にしてストラップリテイナーで留めてください。
体型にあわせて調節してください。ダブルバックバックルが、肩甲骨の位置と同じ高さになるように調節してください。

間に同じ同じによるのうたほかから、いったのます。 調節と子スト 墜落の際に怪我をする危険を低減するため、ハーネスは体にぴったりと フィットするよう調節してください。 ハーネスが正しくフィットし、使用目的に見合う快適性が得られることを 必ず確認してください。ハーネスを装着した状態で動いたり、装備を全 て装着した状態で各アタッチメントポイントから吊り下がり、適切に調節 されているかテストをしてください。

# フォールアレスト

# 図11. フォールアレスト ハーネス (EN 361 2002

**四 口** ・ 壁落を止めるためのフルボディハーネス。EN 363 が定めるフォールア レストシステムを構成する用具の 1 つです。 必ず EN 795 に適合した アンカー、EN 362 に適合したロッキングカラビナ、EN 355 に適合した エネルギーアフソーバーと併加してください。

ユネルキーノノーハーこい用していたこと。 **11A. 胸部アタッチメントポイント**フォールアレストシステム(例:モバイルフォールアレスター、エネルギーデブソーバー、その他 EN 363 で定められているシステム)に連結する場合は必ず胸部アタッチメントポイントを使用してください。区別しやすくするため、このアタッチメントポイントには「A」の文字が刻印さ

# クリアランス: ユーザーの下の障害物のない空間

7リパフンス・ユーリーの PいP库 古物ツ/&・エiBy 塗落した場合に途中で障害物にあたることを回避するため、ユーザーの 下には必ず十分なケリアランスを確保してください。必要なケリアラン スを算出する方法は、フォールアレストシステムを構成するその他の器 具(エネルギーアフソーパー、モバイルフォールアレスター等)の取扱説 明書に記載されています。

# ロープアクセス

## ロープクランプ『クロール』 EN 12841: 2006

## 用途について

「印心トレーレ・し EN 12841 2006 に適合した『クロール』はタイプ B のロープクランプ で、作業ロープの登高に使用します。 注意:必ずパックアップローブにセットした、モパイルフォールアレスター 『アサップ』等のパックアップ器具と併用してください。 ロープクランプ『クロール』は、EN 363 に準じたフォールアレストシステ ムでの使用には適していません。

# ロープの直径

EN 1891 タイプ A に適合した直径  $10\sim 13$ mm のセミスタティックローブを使用してください。

# 図12. ロープのセット方法

図12. ローノのゼットアが、 報指と人差し指でセーフティキャッチを下に引き、外側に開いてください。セーフティキャッチを本体部分にひっかけます。これでカムが開いた状態でロックされます。ロープを挿入します。セーフティキャッチをロック状態から解除し、カムがロープを押さえていることを確認してください。セーフティキャッチは不意にカムが解除されるのを防ぎます。

ローブの取り外し方法 器具を上にスライドさせながら、セーフティーキャッチをまず下側に、それから外側に引いてください。

# 図13. 『クロール』の機能とその他の注意点

13A. ロープ登高 『クロール』は、作業ローブやアクセスローブを登るために使用する器 見ロール』は、作業ローブやアクセスローブを登るために使用する器 会とローブをロックして止まります。 歯の付いたカムがローブをロックし、器具が下方向へは動かないよう にします。カムには、ロープについた泥等によるつまりを防ぐためのス ロットがあります。

# 13B. 『グロール』を下方向に動かす方法(例外的な状況で使

「クロール」を少し上に動かすと同時に、人差し指でカムを押し、ローブ の外皮から歯を外してください。セーフティキャッチは操作しないでく ださい。不意にカムを解除してしまう危険があります。

たさい。不意にカムを解除してしまう危険があります。
13C. 作動点検 毎回、使用前に、ローブが正しく取り付けられていること、器具が正しく作動することを確認してください。確認作業は必ずセルフピレイをとった状態で行ってください。
でクロール』を上にスライドさせ、スムーズに動くことを確認してください。また、下に引いて、器具がローブをロックすることを確認してください。

13D. 注意点
- 『クロール』の力ムは、使用していないときは必ず閉じてください。カムを開いたままにしていると、その他の器具等が挟まる危険があります。
- 注意: カムの動きを妨げるようなものが、器具に挟まらないようにしてください。(ウイ、泥、雑草、スリング、衣服、塗料等)。
- 衣服やウェビング等が、セーフティキャッチに引っかからないようにしてください。
- 『クロール』と吊元との間のロープは常にたるみがない状態でなければなりません。ユーザーは常に吊元よりも低い位置で作業をしてください。

ださい。
- ロープによる衝撃吸収:
座落が起こった際に衝撃を吸収するのはロープです。ロープの衝撃吸収力は吊元に近づくにつれて下がり、最終的にゼロになります。
- とがった角やざらざらした壁面など、ロープを傷つける可能性のあるものとロープが接触しないようにしてください。
- 『クロール』が、ロープにセットされた状態でスムーズに動くことを確認してください。動きを妨げるものがないよう注意してください(例:ロープの結び目、磨柱した箇所等)。
- ロープの末端にストッパーノットを結ぶことを忘れないでください。

図14. ロープ登高

- 作業ロープ: 「クロール」と、フットループを取り付けたハンドル付ロープクランプ(『アッセンション』等)を使用します。 必ずハーネスとハンドル付ロープクランプをランヤードで連結してください。 - バックアップローブ: モドイルフォールアレスター『アサップ』等のバックアップ器具を使用してください。

# ギアループの最大許容荷重

# 一般注意事項

# 被着体について: アタッチメントポイント / コネ

がしていない用具に連結した場合、カラビナが偶発的に外れる、壊れる、または併用する用具の安全機能を損なうといった危険性がありま

警告:ハーネスのアタッチメントポイントは、コネクターのゲートに、てこの作用を起こす可能性があります。

カラビナの位置が不適切で、突然ローブにテンションがかかったり、カラビナのゲートに衝撃が加わった場合、ロッキングシステムが壊れ、ゲートが開いてしまう可能性があります。
このような危険を低減するために、システム(ランヤード、ディッセンダー等)にテンションがかかる度にコネクターが正しい位置にあることを確認してください。
また、使用しているコネクターがハーネスのアタッチメントボイントに適していることを確認してください(形、サイズ等)。不適切な向きや位置になりやすいコネクターは使用しないでください。

# EN 365: 警告

適合性 この製品がお手持ちの用具と併用できることを確認してください。それ ぞれの製品の取扱説明書を読んで下さい。 等告:複数の器具を同時に使用する場合、1つの器具の安全性が、別の 器具の使用によって損なわれることがあります。 もしこの製品の適合性に関して疑問点があれば(株)アルテリアにご相 談ください。

システム用の支点はユーザーの体より上にとるようにしてください。支 良は、最低でも10 kNの破断強度を持ち、EN 795 基準を満たしていな ければなりません。

りればなりません。 **レスキューブラン**- ユーザーは、この製品の使用中に問題が生じた際にすみやかに対処 できるよう、レスキューブランとそれに必要となる装備をあらかじめ用意 しておく必要があります。このため、ユーザーは必要となるレスキュー 技術を習得しておく必要があります。

フネクター - カラビナは必ずゲートがロックされた状態で使用してください。ゲートを指で押し、ロックされていることを確認してください。 コネクターは、それぞれ付属の取扱説明書に従って点検してください。

その他
- 警告、危険:この製品を、ざらざらした箇所や尖った箇所にこすりつけないようにしてください。
- ユーザーは、高所での活動が行える良好な健康状態にあることが必要です。 警告・動きの取れない状態のまま吊り下げられると、ハーネスを着用していても重度の傷害や死に至る危険性があります。
- 製品に記載されたマーキングが、使用期間中識別できる状態にあるよる注意!アゼギャ、

- 製品に配載されたベーキングル、区グプログロックではしてください。 - この製品を使用する作業方法が、地域の行政機関が定める規則や基準に適合していることを確認してください。 - 併用するすべての用見の取扱説明書もよく読み、理解してください。 - 取扱説明書は、製品と一緒にユーザーの手に届かなければなりません。この製品を販売する場合、販売者はその国の言語に訳された取扱説明書を添付しなければなりません。

**町用年数**注意: 以下にあげるような極めて異例な状況においては、1 回の使用で損傷が生じ、その後使用不可能になる場合があります: 化学薬品との接触、熱利な角との接触、熱利な角との接触、熱利な角との接触、熱利な角との接触、熱利な角との接触、熱力な角にでの使用や保管、大きな墜落や過荷重等 ペツル製品の**耐用年数**は以下の通りです: プラスチック製品、繊維製品は最長で製造日から10年。金属製品には特に設けていません。ただし、下に記された"**廃棄基準**"の内一つ以上に該当する場合や、技術や基準の進歩を反映した新しい器具との併用に適さないと判断される場合は直ちに廃棄してください。 実際の耐用年数は様々な要因によって決まります。例: 製品を使用する環境、使用の頻度、状況、ユーザーの能力、保存やメンテナンスの状況等

# 製品に損傷や劣化がないか定期的に点検して

以下のいずれかに該当する製品は以後使用しないでください: - 使用前、使用中の点検、または定期点検において使用不可と判断さ

- 使用削、使用中の点検、または定期点検においく使用不可と判断された - 大きな墜落を止めた場合や、非常に大きな荷重がかかった - 完全な使用履歴が分からない - ブラスチック製品または繊維製品で、製造日から10年以上経過した - 製品の状態に疑問がある - 表明シル医に疑问かめる 使用しなくなった製品は、以後使用されることを避けるため廃棄して ください。

# 新しい技術および器具の発達

製品が、システムの中での使用に適さないと判断され、実際の耐用期間 が過ぎる前に廃棄される場合の理由は様々です。例:関連する基準、基 格、法律の変更、新しい技術の発達、他の器具との併用に適しない等

# 改造と修理

ベツルによって認められた場合を除き、製品の改造および修理を禁じま す。 製品の機能を損ねる危険性があります。

# 持ち運びと保管

紫外線、湿気、化学薬品等から保護するため、ハーネスは付属の袋もし くはその他のケース等に収納して保管してください。

**▶ 下山**この製品には、原材料及び製造過程における欠陥に対し3年の保証期間が設けられています。ただし以下の場合は保証の対象外とします:通常の磨耗、酸化、改造や改変、不適切な保管方法、メンテナンスの不足・事故または過失による損傷、不適切または誤った使用方法による故障。
ペッルルグ ペッカルグ ペッカルグ

るの以唱。 ペツル及びペツル総輸人販売元である株式会社アルテリアは、製品の 使用から生じた直接的、間接的、偶発的結果またはその他のいかなる 損害に対し、一切の責任を負いかねます。